

# INTERNAL WALL BRACKET FOR FIXING NON LOAD BEARING WALLS TO TRUSSES




## APPLICATION

Internal Wall Brackets are used on internal non load bearing walls to provide restraint against lateral movement to top of wall.

Use Internal Wall Brackets where the unrestrained distance exceeds 1.8m.

## INSTALLATION

1. Fix bracket to top plate with 4 / 30mm x 3.15 dia. Product Nails. See Figure 1.
2. Fix to truss using 3 / 30mm x 3.15 dia. Product Nails to top of slot. Place nails in the 3 lowest slots available, ensuring minimum distance of 15mm is maintained to bottom edge of truss bottom chord. See Figure 2.

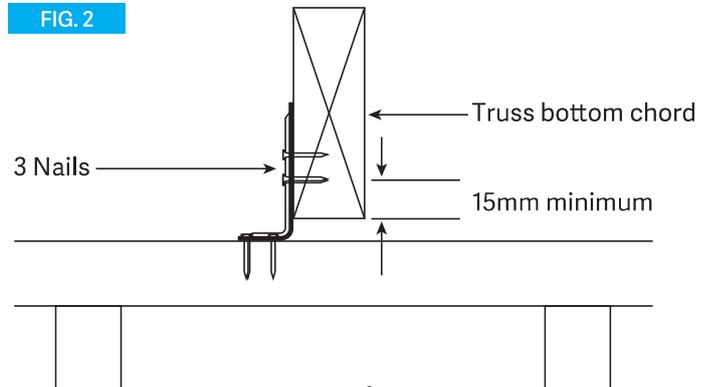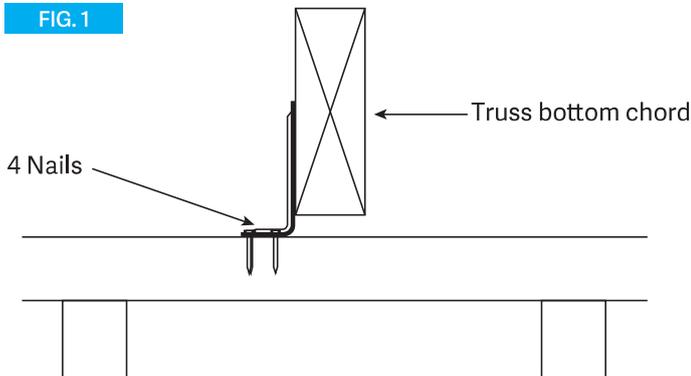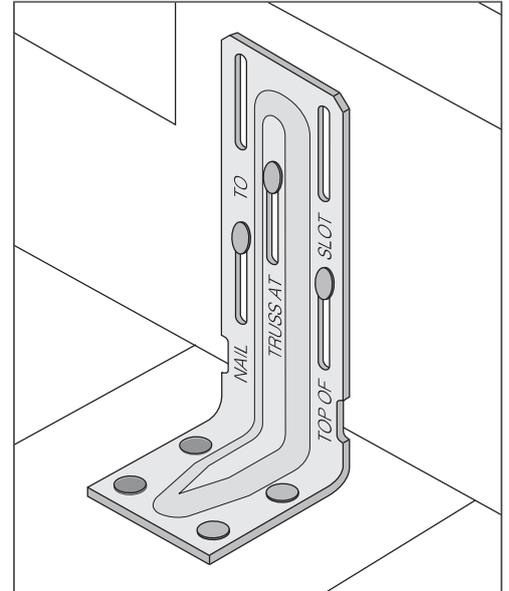

**Code: IWB**

**Material: 1.0mm G300 Z275 Galvanised Steel**

