


PILE BEARER CONNECTION

TYPE 2A & TYPE 2B IN EXPOSURE ZONES B & C AS PER NZS 3604:2011 SECTION 4 DURABILITY

(As defined in MBIE document "TC3 Technical Guidance New Foundations" version C)

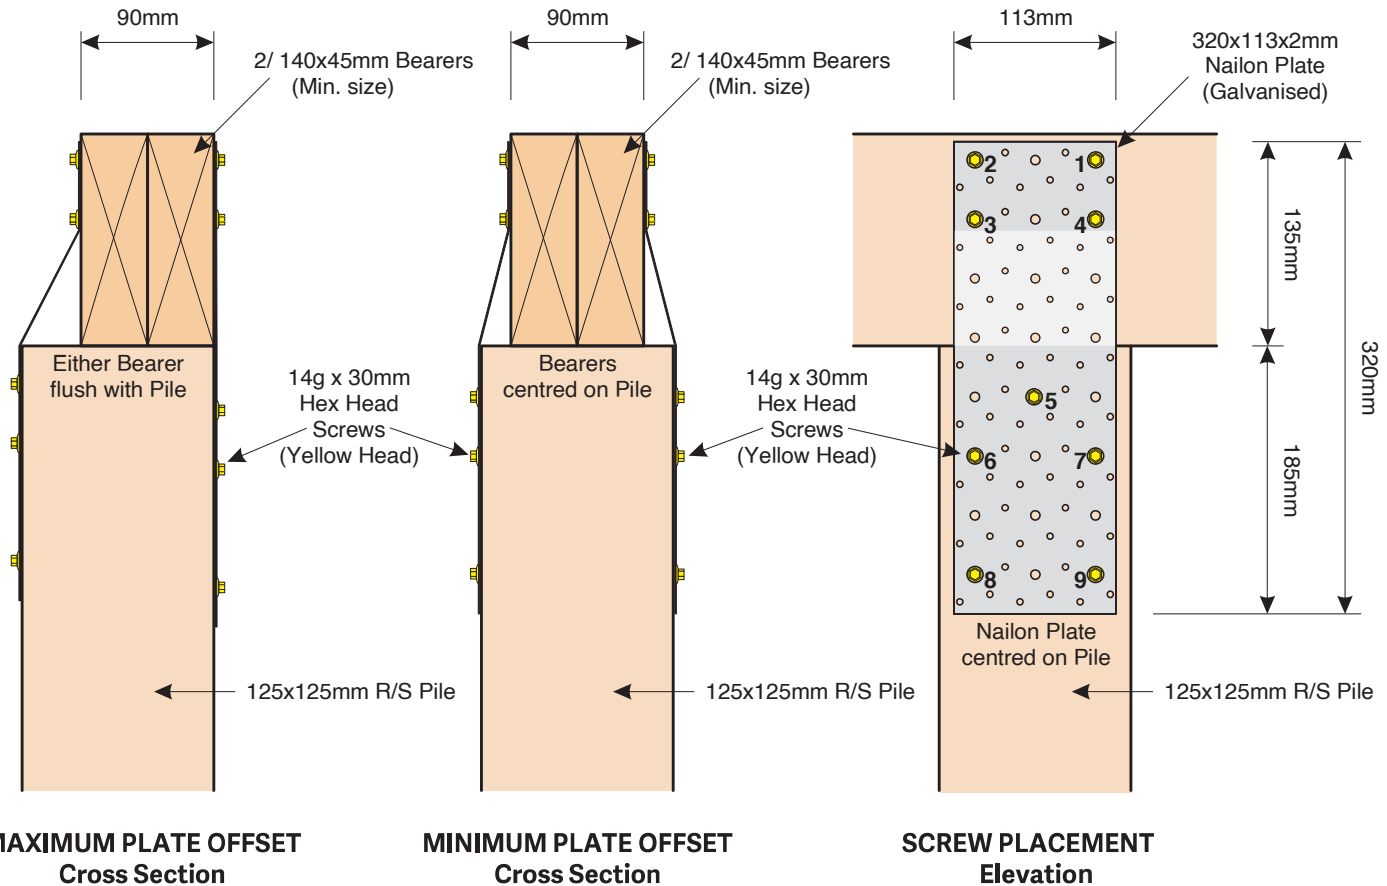

Installation


1. Install screws as indicated, using the larger holes in the Nailon Plate.
2. Install plate against the pile and bearer using the screws in the numbered sequence as shown above. There is no need to scarf the bearer or pre-bend the plate. Use the screw sequence to pull plate flat against bearer and pile.
3. Once screws numbered 1 to 4 are installed, bend the plate by hand against the pile to assist screw No. 5 in pulling the plate flat. Continue installing screws 6 to 9.

Code: PB2A2B
Material: 1.55mm G300 Z275 Galvanised Steel
Packed: 20 x Nailon Plate 320 x 113mm
 180 x 14g x 30mm Hex Head Galvanised Screws

PILE BEARER CONNECTION

TYPE 2A & TYPE 2B IN EXPOSURE ZONES D AS PER NZS 3604:2011 SECTION 4 DURABILITY

(As defined in MBIE document "TC3 Technical Guidance New Foundations" version C)

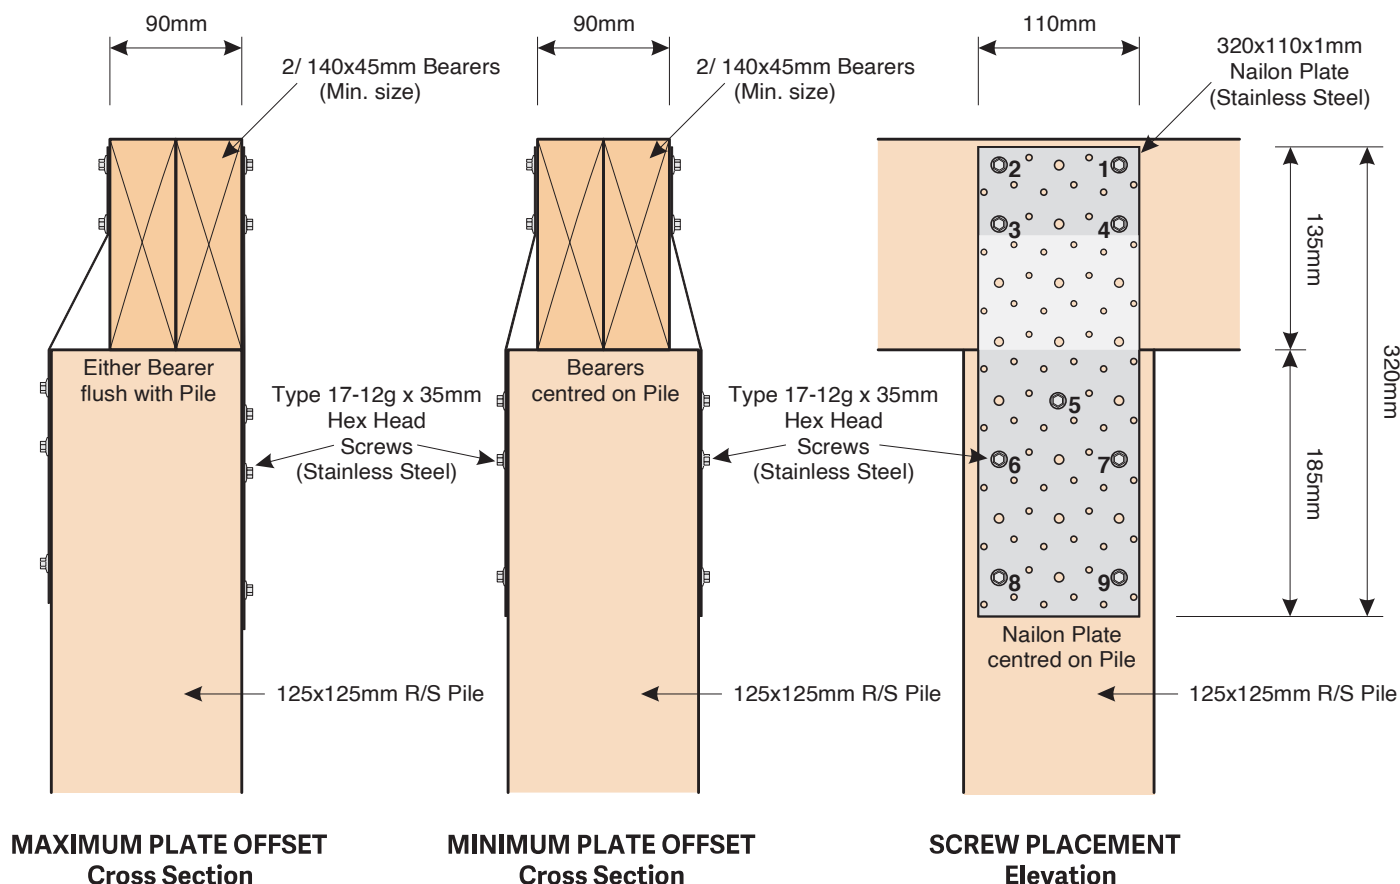

Installation

1. Install screws as indicated, using the larger holes in the Nailon Plate.
2. Install plate against the pile and bearer using the screws in the numbered sequence as shown above. There is no need to scarf the bearer or pre-bend the plate. Use the screw sequence to pull plate flat against bearer and pile.
3. Once screws numbered 1 to 4 are installed, bend the plate by hand against the pile to assist screw No. 5 in pulling the plate flat. Continue installing screws 6 to 9.

Code: SSPB2A2B
Material: 0.9mm Stainless Steel 304-2B
Packed: 20 x Nailon Plate 320 x 110mm
 180 x Type 17-12g x 35mm Hex Head
 Stainless Steel Screws